



Surface preparation is 'key'

1. Prime with Plaskey & Key-it




Why use a primer before tiling?

It lends its own strength and flexibility to the adhesive.

Before you prime:

- Inspect surface for cracking or flaking
- Ensure surface is dry and fully cured
- Clean surface thoroughly

Mix Weber Tylon Plaskey with Key it or use Key-it as a stand alone primer

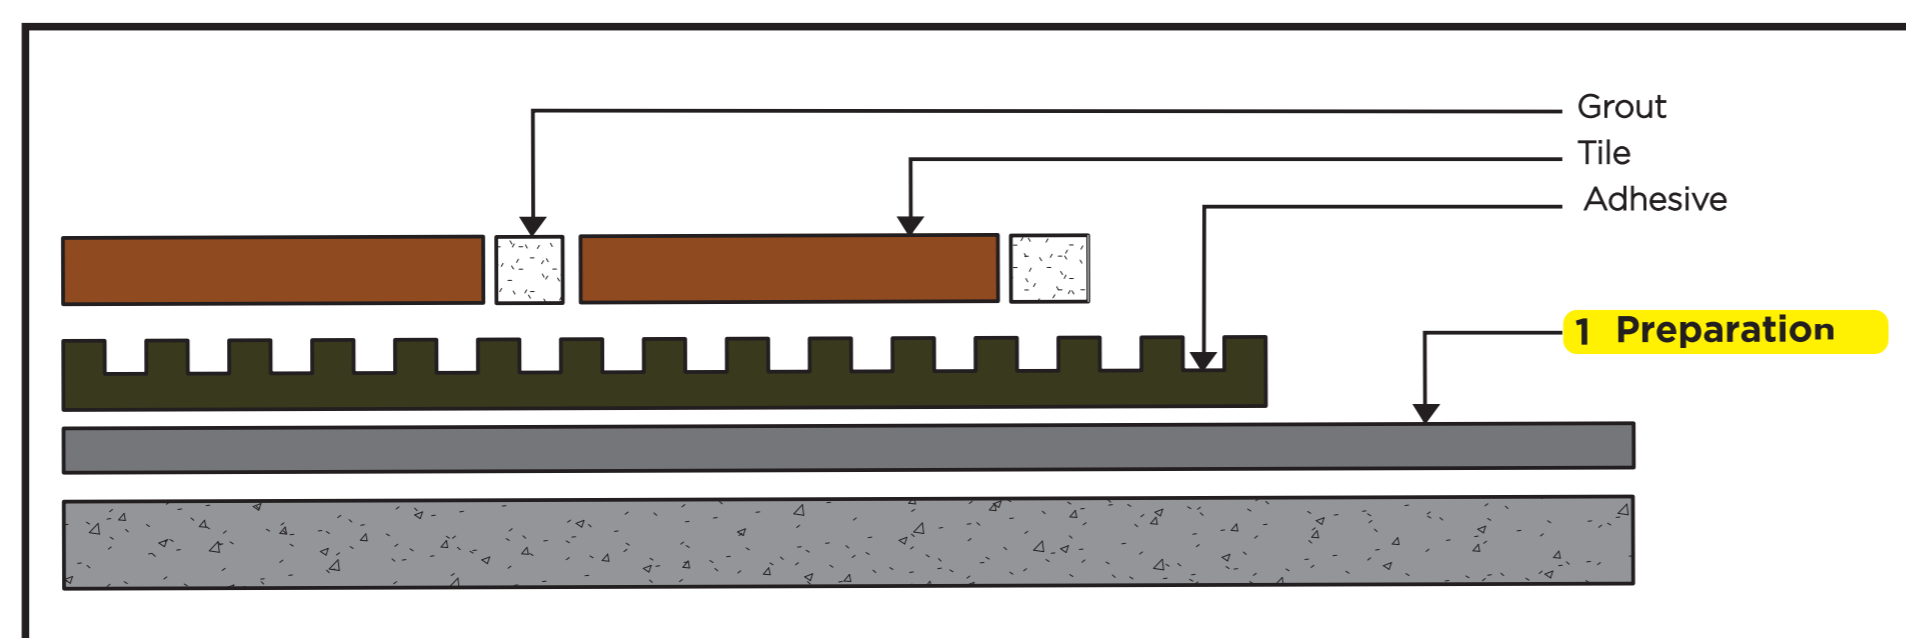

Benefits:

- Increased adhesion to surface
- Excellent water resistant
- Reduces the absorbency of surface to prevent the formation of air bubbles or pinholes



Key-it

3 Easy steps to tile fixing



Plaskey

za.weber

